

# Kelley Library

## Beshara Room AV System Operating Instructions



### Main Menu - Turning System On

If touch screen is off press anywhere on the screen to wake up.

**Main Menu** Should now be displayed.

Press "PROJECTOR" in upper right corner.



Press "PROJECTOR ON" from the drop down menu.

It may take up to 1 minute to see a picture



### Source Selection Menu

When a picture appears on the projection screen press "Watch" from the main menu and the **Source Selection Menu** will be displayed.

Follow the instructions below to select a source

### Blu-ray Player:

Press “Blu-ray Player” from the **Source Selection Menu**.

Insert disc in player (eject button is on top of Blu-ray player to the right). Press eject again to load disc.



Use navigation buttons to play, pause and navigate disc menus.

 
Use the – and + symbols for volume.

### Wallplate:

- Connect Computer using an HDMI cable then press “Wallplate” from the **Source Selection Menu**.

### Whiteboard:

- Press “Whiteboard” from the **Source Selection Menu** (whiteboard is the default source when projector powers up). Use the digital pens to draw on the board. The pens are kept in a small case that is attached magnetically to the equipment rack in the closet. Drawing features can be selected from the menu that appears on the right side of the board.

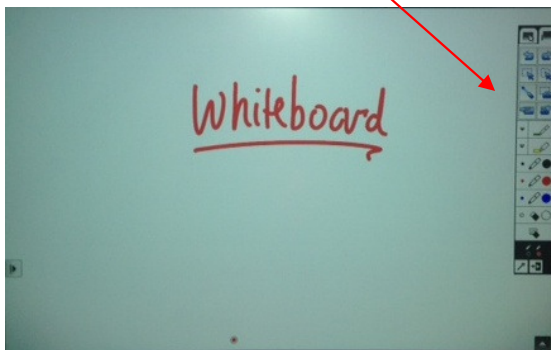

### Wireless Computer:


- Make sure your computer is connected to the library wireless network.

### Install and run EasyMP Network Projection v2.86 [software](#).


- Select advanced connection from EasyMP menu.
- Select Epson projector and “connect”.
- Your computer screen should appear on the projector screen.

- If your computer screen is not displayed on the projector screen press “Wireless” from the **Source Selection Menu**.


### Turning System Off:

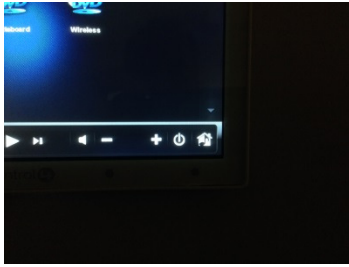

Press power icon in the lower right of touch screen.

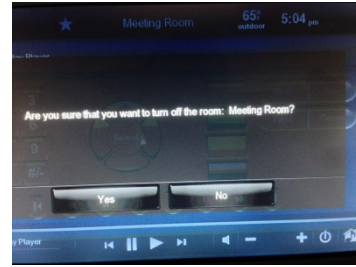 

Confirm power off - “Yes”

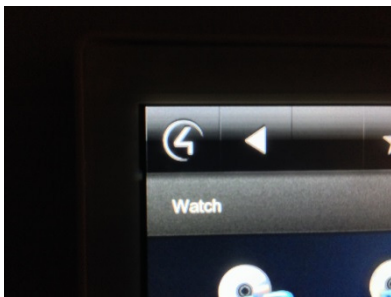

### Getting back to the Main Menu or Previous Screen:

Press “C4” in upper left corner to get back to the **Main Menu**.  
 Press “Left Arrow” to go to the previous screen.

**Note:** If you are having trouble displaying your source go back to the **Main Menu**. Press “Projector” and “Source” from the projector drop down menu in the upper right. This will make the projector scroll to the next active input source.

### Wireless Microphones: Hand Held and Head Worn

Wireless microphones can be used any time during any presentation. They can also be used when the projector is turned off.

Handheld microphone power on/off: Press and hold button on bottom of mic until the display turns on.

Head worn microphone power on/off: Press and hold button on the top of body pack transmitter until the display turns on.

Powering off either microphone: Press and hold power button until the display turns off.